



## **ADJUST PHONE TO WORK ENVIRONMENT**

There are three phone settings you can adjust to accommodate the phone for your work environment:

### **ADJUST RINGER PITCH**

To have your phone ring at a different pitch to differentiate it from other phones in your area,  
*while the phone is idle:*

1. Press **⌘** (SUPERKEY)
2. Press **NO** key until "Ringer Adjust?" appears
3. Press **RING ADJUST** key
4. Press **RING PITCH** key
5. Use **▲** (UP) and **▼** (DOWN) to select different pitch
6. Press **⌘** (SUPERKEY) to exit

### **ADJUST RINGER LOUDNESS**

To have your phone ring more loudly or softly  
*while the phone is ringing:*

- Increase Ringer Loudness**      Press **▲** (UP) key  
**Decrease Ringer Loudness**      Press **▼** (DOWN) key

### **ADJUST DISPLAY CONTRAST**

To adjust the contrast on the display to make it easier to read based on current lighting conditions,  
*while the phone is idle:*

- Increase Display Contrast**      Press **▲** (UP) key  
**Decrease Display Contrast.....** Press **▼** (DOWN) key